© 2013 All Rights Reserved

Acer Liquid Z5 Quick Guide

Model: Z150

This revision: 11/2013

Product information

For detailed product information, please go to **www.acer.com**.

For service and support information, or to download the User Guide, drivers and applications, please follow the instructions below:

1. Go to **www.acer.com** and click **Support** > **DRIVERS AND MANUALS**.

2. Select appropriate items from **Select Product Family** > **Select Product Line** > **Select Product Model**.

3. Select the operating system from the drop-down menu.

Acer Liquid Z5 Smartphone

Model number:_____

Serial number: _____

Date of purchase: _____

Place of purchase: _____

Android is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.

Notice

The information in this publication is subject to change without notice and is provided "AS IS" WITHOUT WARRANTY OF ANY KIND. THE ENTIRE RISK ARISING OUT OF THE USE OF THIS INFORMATION REMAINS WITH RECIPIENT. IN NO EVENT SHALL COMPAQ BE LIABLE FOR ANY DIRECT, CONSEQUENTIAL, INCIDENTAL, SPECIAL, PUNITIVE OR OTHER DAMAGES WHATSOEVER (INCLUDING WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION OR LOSS OF BUSINESS INFORMATION), EVEN IF COMPAQ HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

The limited warranties for Compaq products are exclusively set forth in the documentation accompanying such products. Nothing herein should be construed as constituting a further or additional warranty.

This publication does not constitute an endorsement of the product or products that were tested. The configuration or configurations tested or described may or may not be the only available solution. This test is not a determination or product quality or correctness, nor does it ensure compliance with any federal state or local requirements.

Product names mentioned herein may be trademarks and/or registered trademarks of their respective companies.

Compaq, Contura, Deskpro, Fastart, Compaq Insight Manager, LTE, PageMarq, Systempro, Systempro/LT, ProLiant, TwinTray, ROMPaq, LicensePaq, QVision, SLT, ProLinea, SmartStart, NetFlex, DirectPlus, QuickFind, RemotePaq, BackPaq, TechPaq, SpeedPaq, QuickBack, PaqFax, Presario, SilentCool, CompaqCare (design), Aero, SmartStation, MiniStation, and PaqRap, registered United States Patent and Trademark Office.

Netelligent, Armada, Cruiser, Concerto, QuickChoice, ProLiant, ProSignia, Systempro/XL, Net1, LTE Elite, Vocalyst, PageMate, SoftPaq, FirstPaq, SolutionPaq, EasyPoint, EZ Help, MaxLight, MultiLock, QuickBlank, QuickLock, UltraView, Innovate logo, Wonder Tools logo in black/white and color, and Compaq PC Card Solution logo are trademarks and/or service marks of Compaq Computer Corporation.

Microsoft, Windows, Windows NT, Windows NT Server and Workstation, Microsoft SQL Server for Windows NT are trademarks and/or registered trademarks of Microsoft Corporation.

NetWare and Novell are registered trademarks and intraNetWare, NDS, and Novell Directory Services are trademarks of Novell, Inc.

Pentium is a registered trademark of Intel Corporation.

Copyright ©1998 Compaq Computer Corporation. All rights reserved. Printed in the U.S.A.

Microsoft Exchange Server 5.5 on the Compaq ProLiant 3000
Performance Brief prepared by Internet Solutions Business Unit

First Edition (September 1998)
Document Number ECG096/0998

Downloaded from www.Manualslib.com manuals search engine

Safety Instructions

For Installation

- Use only the type of power source indicated on the marking labels.
- Use only the power adapter supplied with the product.
- Do not overload wall outlet or extension cords as this may increase the risk of electric shock. If the power cord is frayed, replace it with a new one.
- Proper ventilation is necessary to prevent the product from overheating. Do not block or cover the slots and openings of the device, which are intended for ventilation and proper operation.
- Do not place the product near any source of heat or expose it to direct sun light.
- Do not expose the product to moisture. Never spill any liquid on the product.
- Do not attempt to connect with any computer accessory or electronic product without instructions from qualified service personnel. This may result in risk of electric shock.
- Do not place this product on an unstable stand or table.

For Using

- Power off and unplug this product from the wall outlet when it is not in use or before cleaning. Pay attention to the temperature of the power adapter. The temperature may be high.
- After powering off the product, power on the product at least 15 seconds later.
- Do not block the ventilating openings of this product.
- When the product is not in use for a period of time, unplug the power cord of the product to prevent it from damage of storm or sudden increase in ratings.

Downloaded from www.Manualslib.com manuals search engine

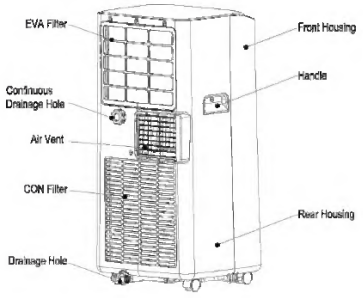



Control panel

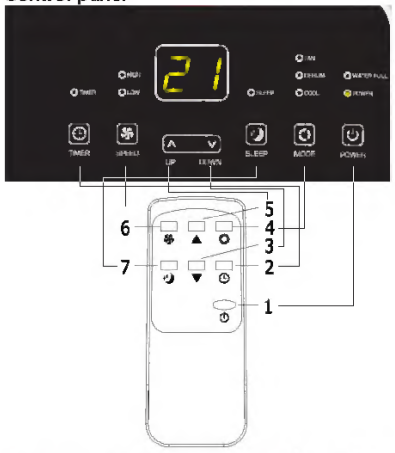

1. Power: On/Off button. When the power is off during the operation, the previous setting will resume when it restarts.
2. Timer: press to set timing. When the timing symbol is flashing, press up and down key to select the required timing value. Timing values can be set in 1-24 hours
3. Down: press to decrease temperature and timing set value.
4. Mode: press to switch mode as cooling, fan, dehumidifying modes.
5. Up: press to increase temperature and timing set value.
6. Fan: press to select high, low wind speeds. · Press "MODE" to select fan mode, High or Low Fan speed.
7. Sleep Mode: Press to turn on the sleep mode. When the sleep mode is turned on under cooling mode on, the temperature will be increased by 1 °C every hour and fan decrease to low speed. Sleeping mode s invalid under dehumidifying, fan mode and when water tank is full.

When the air conditioner is powered on for the first time, and then the air conditioner will enter standby mode.

Protection modes

• Frost Protection:

In cooling or dehumidifying modes, if the temperature of the exhaust pipe is too low, the air conditioner will automatically enter protection status. When of the exhaust pipe rises to a normal temperature, it will revert automatically.

• Overflow Protection:

When water in the water tank exceeds the warning level, the air conditioner will automatically sound an alarm, and the "FULL" indicator light will flash and should empty the water tank. (see more details in Drainage Instructions)

• Protection Function of the Compressor

To increase the service life of the compressor, it has a 3-minute delay booting protection function after the compressor is turned off.

Installation

Warning: before using the air conditioner, keep it upright for at least two hours. The air conditioner can be easily moved in the room. In the moving process, ensure that the air conditioner is in the upright position and it should be placed on a flat surface. Do not install or use the air conditioner in the bathroom or other humid environments.

Installation of assembled exhust pipe

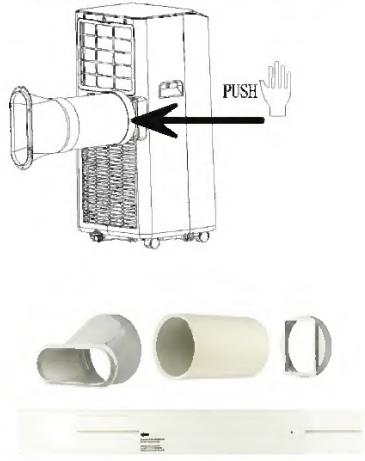

Figure 1.

Insert assembled exhaust pipe (the end of the exhaust joint) into the back-panel vent slot (push to the left) and complete the assembly (as shown in figure 1).

Installation of window sealing plate components

1. Adjust their opening distance to bring both ends of the assembly into contact with the window freme, and fix various components of the assembly
2. Half open the window, and mount the window sealing plate assembly to the window (as shown in Fig.2 and Fig.3). Components can be placed in horizontal and vertical direction.

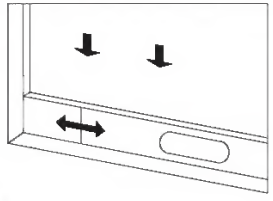

Figure 2.

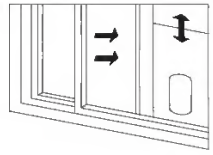

Figure 3.

3. The flat end of the exhaust pipe joints must be snapped into place.
4. The distance between the body and walls or other objects shall be at least 50 cm (as shown in Fig.4).
5. Elongate the exhaust pipe and snap the flat end of the exhaust pipe joints into the hole of the window sealing plate assembly (as shown in Fig.5 and Fig.6).
6. The pipe cannot be bent more than 45 degrees.

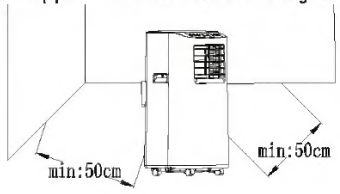

Figure 5.

Figure 6.

Important Notice:

The length of the exhaust hose shall be 280~1,500mm, and this length is based on the specifications of the air conditioner. Do not use extension tubes or replace it with other different hoses, or this may cause a malfunction. Exhaust host must be not blocked; otherwise it may cause overheating.

Drainage Instructions

This air conditioner has two drainage methods: manual drainage and continuous drainage.

Essentials

Basic Gestures

Basic Gestures

Air Gestures

You can use gestures to take screenshots and scroll without touching the screen.

Go to **Settings** > **Accessibility features** > **Shortcuts & gestures** > **Air gestures**, and ensure that **Air scroll** and **Grabshot** are enabled.

	**Air scroll** To air scroll, do the following: Scroll down: Hold your hand half an arm's length away from the screen, with the palm of the hand facing the screen, and your fingers pointing upwards. After appears at the top of the screen, move your hand downwards to begin scrolling. Scroll up: Hold your hand half an arm's length away from the screen, with the back of the hand facing the screen, and your fingers pointing downwards. After appears at the top of the screen, move your hand upwards to begin scrolling.
	Take a grabshot Place your hand half an arm's length away from the screen with the palm of the hand facing the screen, and wait for to appear at the top of the screen. Then close your fist to capture a screenshot.

System Navigation Gestures

Go to **Settings** > **System & updates** > **System navigation** and ensure that **Gestures** is selected.

	Back Swipe inward from the left or right edge to return to the previous screen.

Chapter 4: Service Information

Theory of Operation 25
Z-80A System Operation 26
Select Code Recognition 26
Interrupt System 27
Interface Reset 27
Shared Memory Controller 28
Addressing 28
Read/Write Control 28
Clock Circuits 28
Memory Access Select Timing 29
Memory Cycle Timing 29
Hardware Registers 31
Shared RAM 32
Default Switches 33
Baud Rate Multiplexer 33
Line Drivers and Receivers 33
Replacement Parts 34

English

A. LANGUAGE Selection

This function enebles you to select the language for the on screen display. The language availeble for selection is English, Spanish or Portuguese.

2. Press the **menu** button to activete the **LANGUAGE** menu.



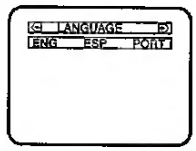

3. Press the control + button to cycle through the **LANGUAGE** menu and select the language of your preference.



4. When you have selected the preferred lenguage, press the **menu** button to confirm the selection.



Note : If you wish to exit from the Installation menu after each selection, press the **install** button.

B. TUNER Selection

This funtion enables you to select the TV tuner either in the entenna or cable mode.

2. Press the control + or — button to select the **TUNER** menu.

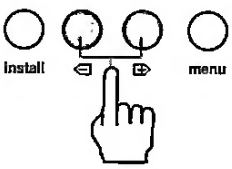

3. Press the **menu** button to activete the **TUNER** menu.



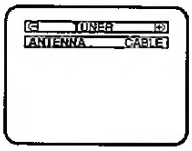

4. Press the control + or — button to select either the **ANTENNA** or **CABLE** mode.

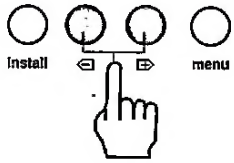

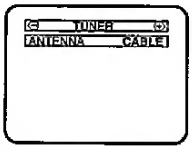

5. Press the **install** button to store the new setting and then press the **menu** button to exit.



Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

To support some controller features, the controller may also require a hardware configuration that includes the following cache (array accelerator) options:

- A cache module that is 256 MiB or larger
- A compatible battery pack or capacitor pack

To obtain these options, contact an HP authorized reseller or see the HP website (http://www.hp.com/products/smartarray).

Downloaded from www.Manualslib.com manuals search engine

4. Select **Network & internet**.

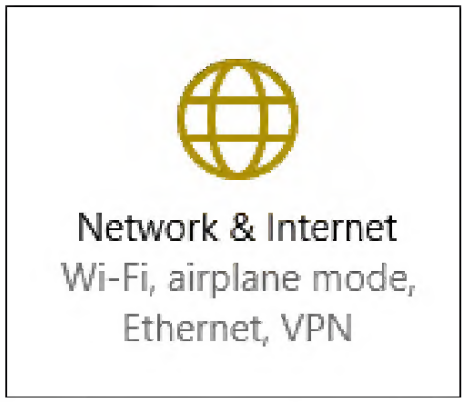

5. You will see a list of available wireless networks. Select the one you wish to use.

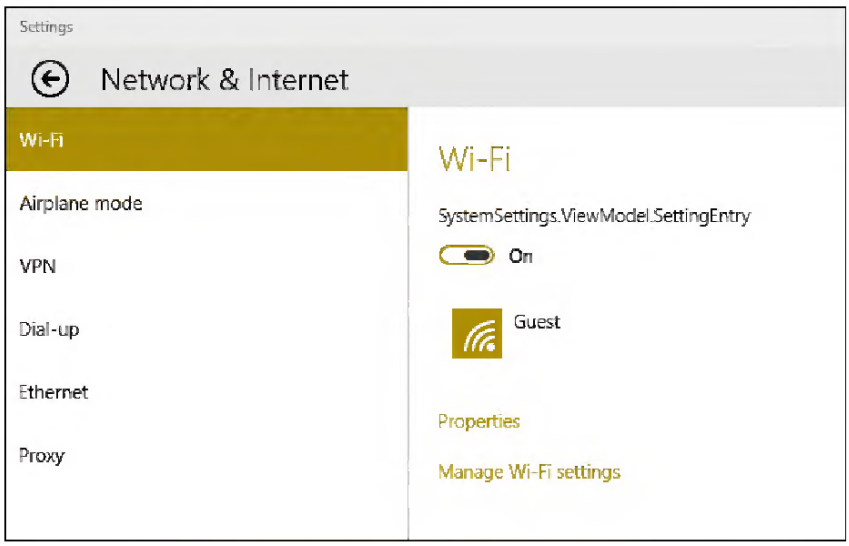

Downloaded from www.Manualslib.com manuals search engine